

### Overview

These instructions describe how to perform a Host-to-Host software upgrade.

### What you need

This procedure requires two epoc Hosts.

1. **Host #1** contains the newest version of epoc Host software:
2. **Host #2** is the host you wish to upgrade.

### How to Perform a Host-to-Host Software Upgrade

1. Turn ON BOTH **Host #1** and **Host #2**.
2. Log into the Host as administrator.  
 User Id: **administrator**  
 Password: **administrator**
3. Set EDM present to **"No"** on both Host #1 and Host #2.



EPOC Host did not detect any EPOC Readers

Please make sure all EPOC Admin options range and EDM options attempt to Set Date/Time clicking the Sync with EDM right of this Perform upgrade >



Tap "Tools→EDM options"




EDM present?  Yes  No

This means that EPOC Host will not synchronize with an EDM (EPOC Data Manager) in order to upload test results, data files, QC records and download configuration options. ALL configuration options will be accessible through the various options in the "Tools" menu.



Set "EDM present" to "No"


4. On **HOST #2**, select **“Tools→Perform upgrade→From Host”**.

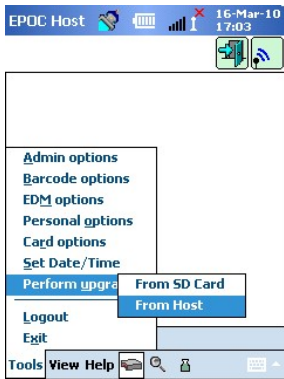

Tap **“Tools→Perform upgrade”**  
**→From Host”**




**Host #2** searches for other Hosts

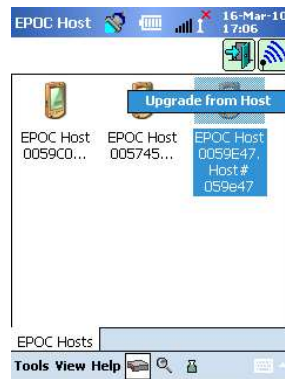

Find **Host #1** in the list. Double tap **“Upgrade from Host”**



Verify that you wish to proceed.

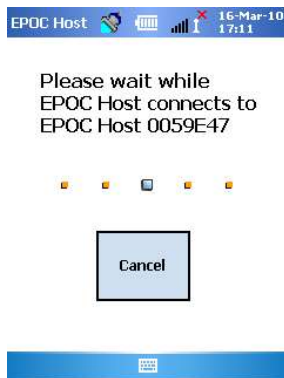


Connecting to **Host #1**...




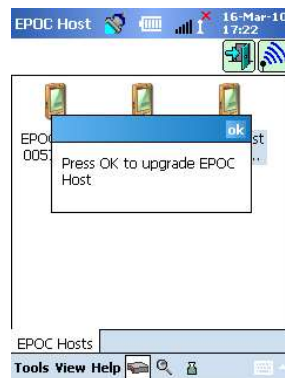
Receiving upgrade file from **Host #1**...



If error occurs, start over and try again.

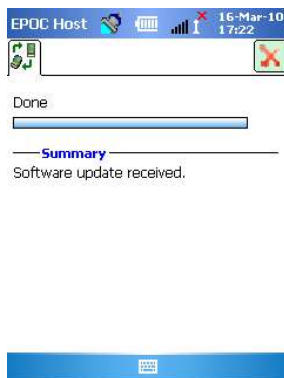

Software update received from **Host #1**  
Tap on the  to install software.



Press OK to upgrade epoc Host software